
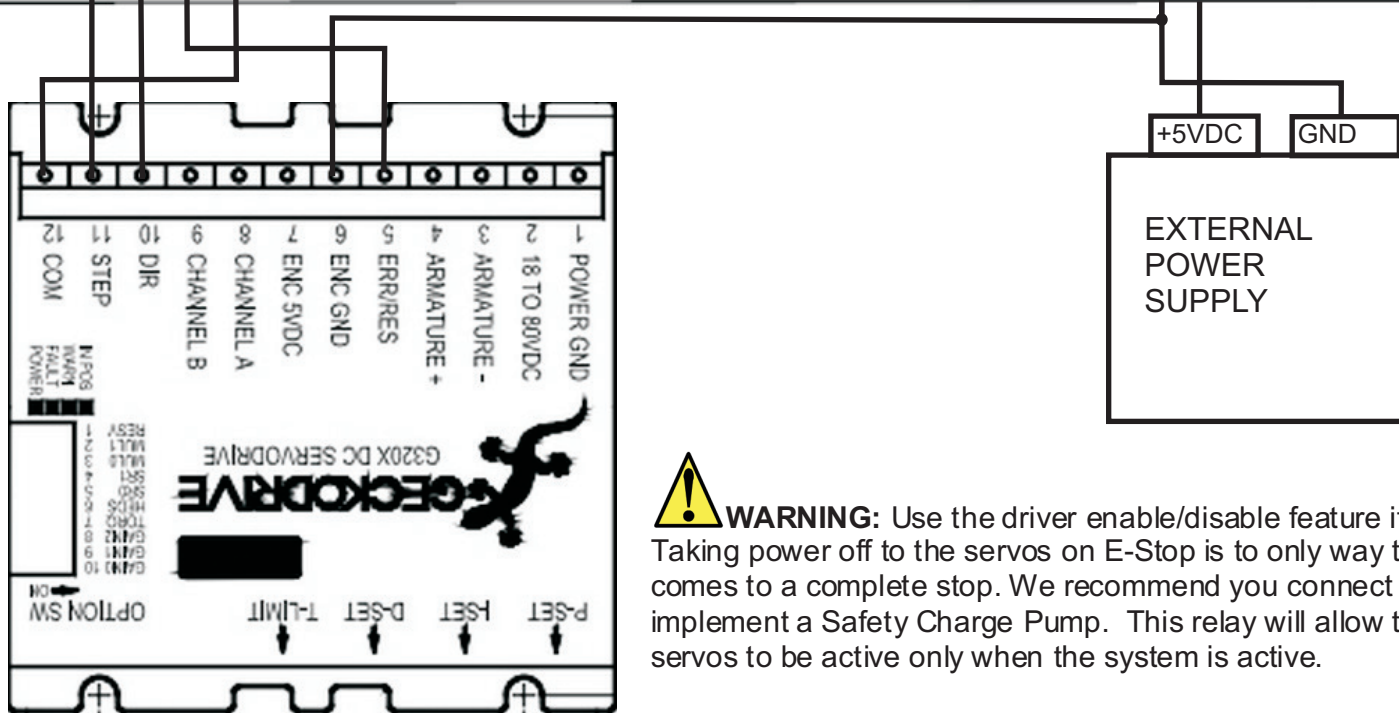
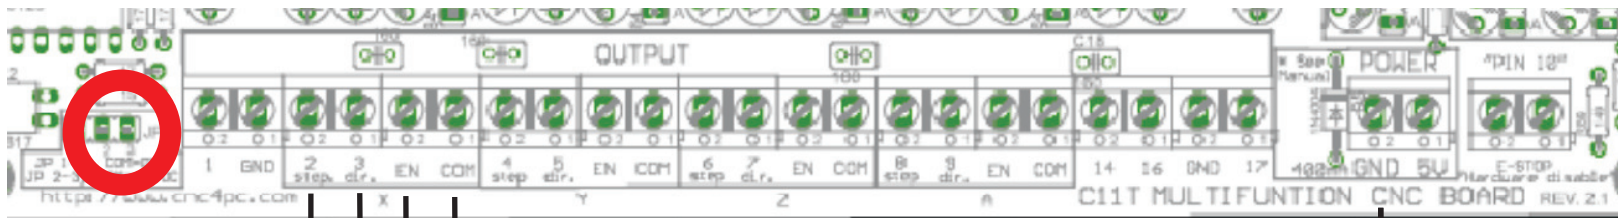


MULTIFUNCTION CNC BOARD SAMPLE WIRING DIAGRAM C11T REV2

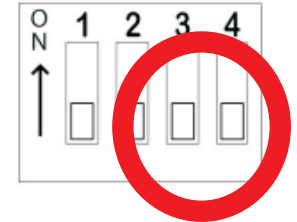

⚠ WARNING: Use the driver enable/disable feature if your setup allows it. Taking power off to the servos on E-Stop is to only way to ensure the system comes to a complete stop. We recommend you connect a relay to pin 17 and to implement a Safety Charge Pump. This relay will allow the power supply for the servos to be active only when the system is active.